

IGNITION SWITCH

REMOVAL AND INSTALLATION

Disconnect battery ground lead located in trunk.

Remove five screws securing upper and lower steering shaft covers (1) together.

Disconnect two electrical connectors (4) from ignition switch (3).

Remove two set screws at base of switch (arrows).

Place ignition key into switch and turn it to arrow mark on switch face.

Insert a thin bladed screwdriver or similar tool into opening (2) on right side of switch and push in to unlock. Pull switch assembly out.

Installation is reverse of removal.

1. Steering shaft cover 2. Unlock opening 3. Ignition switch 4. Electrical connectors

